

ADDENDUM

This information applies only to the FLS-2100 Optical Light Source user guide.

On page 1, the text should read as follows:

Unpacking and Inspection

The FLS-2100 is delivered with the following standard items:

- FLS-2100 Instruction Manual
- Warranty Validation Card
- Declaration of Conformity
- Certificate of Compliance
- Cleaning kit
- GPIB interface cable (option)

The FLS-2100 has been thoroughly inspected before shipment. If any damage occurred during transportation or if any item is missing, please notify EXFO immediately. Retain the original packing material in case you need to return the FLS-2100.


On page 14, the following section should be added after Setting the Display Intensity.

Keypad Lockout

To prevent unintended use of the FLS-2100 Optical Light Source keypad during operation, you can lock the control keys (i.e., the blue buttons on the front panel of the unit).

Locking the Keypad

1. Press Setup.
2. Scroll (left/right arrows) to LOCKOUT.
3. Press ENTER.

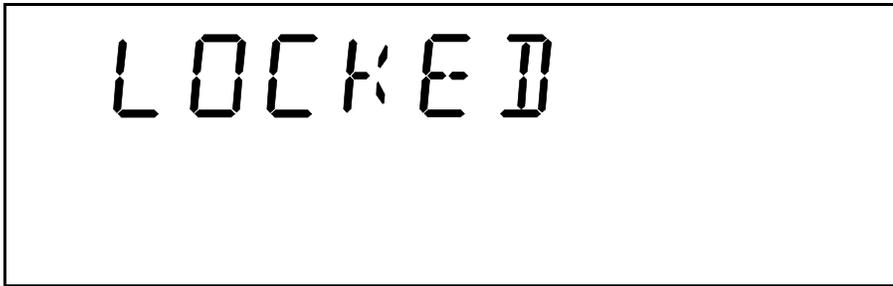

4. The LOCKED message is briefly displayed, then the display reverts to the settings that were active before you entered the Setup menu. All control keys are deactivated.

Unlocking the Keypad

Press Setup, then ENTER. The UNLOCKED message is briefly displayed. All control keys are reactivated.