enerating Reports	Report Info	
	General Information	2
c 😫	Job ID: J_100-QA	
	Port ID: 001	Change the
Scan Live	Operator: OP-hg	information as
	Customer: Your customer	needed.
🗊 🗊 🔐 🦰 Tap.	Location: Here	
en Save Report	Comments:	
in Menu		
Report Info		
ser Preferences	Clear Values	
		З Тар.
Graph View		
Table View	Generate Cance	
Save As 📝 👂 💌 📰	ок ×	1
Save As 📑 🏂 🛄 📰		1
Name	Size Type Date Modified	
😡 3-30-2015_5-47 AM.pdf 😡 default.pdf	65.9KB Adobe Acr 3/30/2015 5:48 AM 61.5KB Adobe Acr 3/27/2015 11:36 AM	
Name: 19_9-56-05 AM.pd	PDF (*.pdf) V Cancel	
		1
Change	the location file name	
	the location, file name <b>5</b> Tap.	
	the location, file name 5 Tap.	
4 and file t	ype as needed.	
4 and file t		5





### **Setting up Your Unit**



Rep

Graph View

Table View

1 0 0

Saves file.

Opens file.

window.



### **Performing an Acquisition**



Tap once to zoom in. Tap again to zoom out. Drag the graph with your finger or stylus to move within the zoomed graph, or use the blue arrow buttons at the bottom of the screen when the view is zoomed in.

# **Changing the Viewing Mode**



Switches between the full table and detected channels only views.

## **Managing Reports**

You can create reports for your results in either XML or PDF format.

#### **Setting up Reports**

iocc		
Scan	User Preferences	Report
Open Save Report	Spectral unit: Frequency (THz)  Choose the default view that will be displayed on a new measurement	File type: pDF  Confirm information before generating report
Report Info User Preferences Graph View	Default view: Keep current • Analysis Parameters Detection Level: -50.00 dBm	Pass/Fail Threshold           Minimum power:         -18.00
Table View	Power Offset: 0.00 dB	Revert to Factory Settings
000		OK Cancel
	Select format and whether you want to be prompted to enter details each time you generate a report.	<b>3</b> Tap.

#### **Entering Report Information**

